

Illusions Inside Mount


HOW TO INSTALL


Tools Needed for Install (not included in the Illusions shade package):

Pencil Measuring Tape Screwdriver

Drill

Level



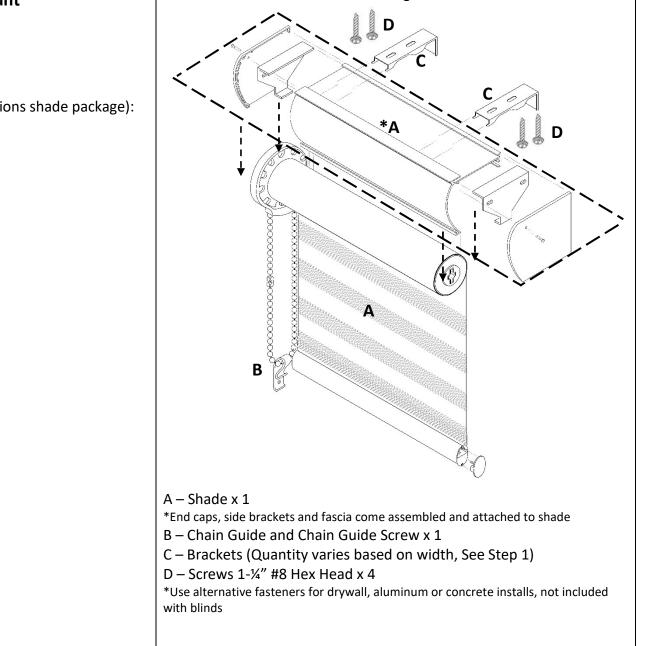



1 Mark bracket location

Items Needed:


Pencil Side brackets

Hold one bracket, 3" from the side of the window, and mark both holes. Repeat on the other side.

Space any remaining brackets evenly, not more than 25" apart. Ensure the marks are level.

Position the bracket forward so the front hooks are outside your window sill providing space for the curved insert fascia to latch. (See Step 4)

Mark the holes to drill with your pencil. Repeat on the other side.



	3,		3"	
Screw in ms Needed: le brackets			-	

2 Drill holes	3 Screw in brackets
<u>Items Needed</u> : Drill Drill bit	<u>Items Needed</u> : Side brackets Screws *Anchors for drywall, aluminum or concrete installs, not included with blinds
Using the holes you marked in Step 1, drill each hole.	Screw each bracket into the holes you drilled in Step 2.



4 Mount shade in brackets


Items Needed:

Shade

Hold the shade with the fascia facing you and the chain hanging down.

Tilt the bottom of the shade toward you and position the front groove on the front hooks of the installation brackets, as shown in Figure A.

Once the front groove is positioned securely over the front hooks of each bracket, tilt the bottom of the shade toward the window until you hear the shade click in place in the back clip of each installation bracket.

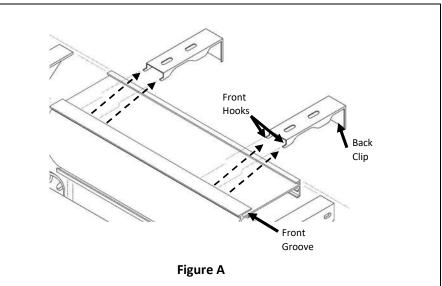

5 Install the chain guide

Items Needed: Chain guide

Screw

Insert the chain into the chain guide clip.

Position the chain guide, allowing for some slack in the chain, and attach with a screw through the hole in the bottom center.

6 Confirm shade operation

Raise the shade all the way up and lower the shade all the way down.

Raise the shade to a center position to ensure it locks in place and lower the shade all the way down.